

Ersatzteil-Liste TSL Serie

Pos. No.	Description	Material	QTY.
1	Housing	AL- 7075	01
2	Drive Plate	Vascomax-300	01
3	Drive Pin	EN-24	01
4	Ratchet	Vascomax-300	01
5	Pawl	Vascomax-300	01
6	Spring for Pawel	SPRI Steel-A	02
7	Dreive Bush	EN-24	02
8	Square Drive	Vascomax-300	01
9	Screw for Housing	Aluminium	02
10	Bush for Housing	P8	01
11	„U“ Cup Seal	PU	01
12	Snap Ring		01
13	Suporting Seal for Position		01
14	O-Ring for Position	MBR	01
15	Backup Seal for Position		01
16	Piston	EN24	01
17	Piston Rod	EN24	01
18	Reaction Arm	AL-7075	01
19	Reaction Arm Fixer	Aluminium	01
20	Screw for Reaction Arm		01
21	Spring for Reaction Arm	SPR Steel-A	01
22	Reaction Arm Boot	EN-24	01
23	Roll Pin for Boot (0,5x30)		01
24	End Cap	EN-24	01
25	O-Ring for End Cap	NBR	01
26	Backup Seal for End Cap		01
27	Safety Shroud	Steel	01
28	Cap SC for Shroud (M5x8L)		04
29	PB Bush for Housing	P8	01
30	Swivel	Aluminium	01
31	Swivel 01	Aluminium	01
32	Swivel 02	Aluminium	01
33	Swivel 03	Aluminium	01
34	Washer	Aluminium	01
35	Allen SC for Swivel (M6x16L)		04
36	Screw for Swivel		02
37	CSK SC for Washer (M4x 10L)		02
38	O-Ring for Swivel		07
39	Roll Pin for Swivel (Ø 4,5x25L)	SPR Steel-A	01
40	Spacer	PB	02
41	O-Ring for Spacer		02

